



Camrock Simple Z10 is a solid photographic backpack. It has a rigid foam bottom chamber for photographic equipment, a large upper chamber designed for personal items and other accessories, as well as four packaged external pockets. The photo chamber can be freely divided into six parts thanks to adjustable dividers that ensure optimal use of space and perfect fit to the equipment. The interior is made of stiffened foam covered with material which ensures even greater safety of the equipment being transported. Additional safety is provided by the covered zips and the safety buckle. The

large upper compartment holds provisions, a jacket, a bottle, additional photographic accessories, documents, keys, pens, a book, etc. Two outer front and side pockets are intended for additional equipment and other necessary items. The carrying system of the backpack is a specially profiled, comfortable (breathable) braces with adjustable length. Braces have a safety chest strap and special tapes that allow you to attach additional cases and items such as: MP3 Player or mobile phone. In addition, the backpack has a convenient carrying handle in a vertical position. Breathable material on the wall adhering to the back and braces provides ventilation when worn. SPECIFICATION Materials from which the backpack was made guarantee its extraordinary durability. These are: 700D Polyester, 160D polyester Ripstop, special type of 2010D TXP nylon, PE foam. External dimensions $\hat{\text{€}}$ height: 40 cm $\hat{\text{€}}$ width: 33 cm $\hat{\text{€}}$ depth: 21 cm Internal dimensions The main photo chamber $\hat{\text{€}}$ height: 17 cm $\hat{\text{€}}$ width: 26 cm $\hat{\text{€}}$ depth: 15 cm Top chamber $\hat{\text{€}}$ height: 20 cm $\hat{\text{€}}$ width: 27 cm Weight: 0.7 kg The Camrock Simple Z10 backpack will fit, among others cameras such as: $\hat{\text{€}}$ Canon EOS 550D, 500D, 450D, 400D, 350D, 300D, 1000D, 60D, 50D, 40D, 30D, 20D, 7D, 5D Mark II, 5D, 1D, 1Ds Mark IV $\hat{\text{€}}$ Nikon D3X, D3S, D3, D2H, D2, D700, D400, D300S, D300, D200, D100, D5000, D3100, D3000, D90, D80, D70s, D60, D40, D40X $\hat{\text{€}}$ Sony Alpha A900, A850, A700, A550, A500, A450, A390, A380, A350, A330, A300, A290, A230, A200, A100 $\hat{\text{€}}$ Olympus E-30, E-3, E-620, E-520, E-510, E-500, E-450, E-420, E-410, E-400, E-330, E-300 $\hat{\text{€}}$ Pentax K-7, Kx, Km, K20D, K10D, K200D, K110D, K100D, K100D Super $\hat{\text{€}}$ Fuji Finepix S1 Pro, S2 Pro, S5 Pro $\hat{\text{€}}$ Samsung GX-20, GX-10, GX-1L, GX-1S